


RECARO

VELIX 1
USER MANUAL

GB


76 - 150 cm
15 months - 12 years
≤21 kg
UN ECE R129/04

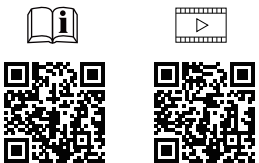


PROTECTING OUR FUTURE.

B5105008 ver.1

1 PRODUCT OVERVIEW

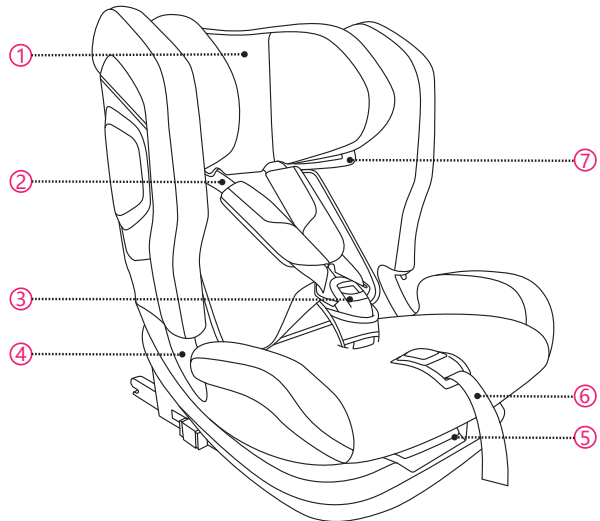

- | | |
|---------------------------|------------------------------|
| 1. Headrest | 5. Recline Adjustment Handle |
| 2. 5-Point Harness | 6. 5-Point Harness Adjuster |
| 3. 5-Point Harness Buckle | 7. Shoulder Belt Guide |
| 4. Lap Belt Guide | |

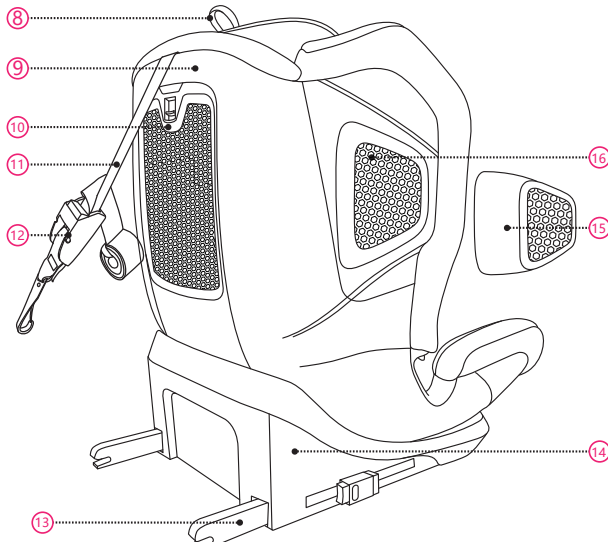

- | | |
|-----------------------------|------------------------------------|
| 8. Headrest Adjustment Ring | 13. ISOFIX Connector |
| 9. Backrest | 14. Base |
| 10. User Manual Compartment | 15. ASP (Advanced Side Protection) |
| 11. Top Tether | 16. ASP Installation Location |
| 12. Top Tether Indicator | |

2 INTRODUCTION

Thank you for choosing RECARO VELIX 1 to ensure your child's safe journey. The seat has been designed, tested and certified according to UNECE R.129, the Enhanced Child Restraint Systems. The seal of approval can be found at the back of the seat base.

VELIX 1 is approved as a child seat for a child with statures of 76-150 cm, approximately from 15 months to 12 years old. It is a universal child seat that fits most but not all vehicle seats. Please refer to your vehicle's handbook.

It is important that you read this user manual BEFORE installing your child seat. Incorrect installation and/or misuse of the seat could endanger your child. User manuals in English and German are available in the user manual compartment behind the child seat backrest. Please store the user manuals there after reading so users can refer to it any time. User manuals in other languages can be downloaded from RECARO website.

Range	ISOFIX or belt	Top Tether	Securing
76-105 cm and ≥15 months and ≤21 kg	ISOFIX	Yes	5-Point Harness
100-150 cm	ISOFIX Safety belt	No No	Safety Belt

The following symbols are used in this user manual:

⚠ DANGER DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

⚠ WARNING WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

⚠ CAUTION CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

3 INFORMATION AND WARNINGS

⚠ DANGER

- VELIX 1 is a forward facing child seat. Do not use any forward facing child seat before your child is at least 15 months in age and exceeds a stature of 76 cm.
- VELIX 1 is an i-Size child seat for a child 76-105 cm in stature, that is compatible with all i-Size seating positions in vehicles. It shall be installed with ISOFIX and Top Tether. For suitable positions in your vehicle, please read your vehicle's handbook.

- VELIX 1 is an i-Size booster child seat for a child 100-150 cm in stature, that is compatible with all i-Size seating positions in vehicles. It shall be installed with ISOFIX, but NOT Top Tether. For suitable positions in your vehicle, please read your vehicle's handbook.

- VELIX 1 is a Universal booster child seat for a child 100-150 cm in stature, that is compatible with universal seating positions in vehicles. It shall be installed with the vehicle's 3-point safety belt, but NOT Top Tether. For suitable positions in your vehicle, please read your vehicle's handbook.

- Always use the 5-Point Harness to secure your child when he/she is less than 100 cm in stature. Always use your vehicle's 3-point safety belt to secure your child when he/she exceeds 105 cm in stature. For a child between 100 cm and 105 cm, we recommend using the 5-Point Harness.

- Pay attention to the growth of your child when he/she is about 100-105 cm in stature. Convert the child seat's securing mode from using 5-Point Harness to using vehicle 3-point safety belt when your child exceeds 105 cm in stature at the latest. Remove the child seat installed with ISOFIX and Top Tether. Store and hide 5-Point Harness and Top Tether to avoid misuse. Then reinstall the child seat with 3-point safety belt.

- If the child is to be secured by the vehicle's 3-point safety belt, the child seat must be installed on vehicle seats approved to UNECE Regulation No.16 or equivalent standards. Please check your vehicle's handbook.

- Always install the child seat with ISOFIX on an i-Size seating position on vehicles, that has ISOFIX anchoring points. Only install it with 3-point safety belt when your vehicle does not have an i-Size seating position. Please read your vehicle's handbook.

- When the child is taller than 150 cm, or when the child's shoulders exceed the Shoulder Belt Guides while the Headrest is at its highest position, the child shall be seated on the vehicle seat without a child seat.

- To have optimum protection, always apply Advanced Side Protection ASP on one side of the child seat that faces the vehicle door.

- The child seat is tested and certified with or without Advanced Side Protection ASP. If it is installed on the middle seat of a vehicle, do not apply Advanced Side Protection ASP to make room for other passengers.

- All passengers shall be informed on how to release your child in the case of an emergency.

- When your child is at least 100 cm in stature and secured by 3-point safety belt, never recline the seat. Only use it in the upright position.

⚠ WARNING

- When your child is below 105 cm in stature and secured by 5-Point Harness, the child seat offers 3 recline positions.
- When installed on a vehicle's rear seat, move the front seat forward far enough that the child's feet cannot reach the backrest of the front seat.
- Please dispose of your child seat in the event of any vehicle and/or violent collision, as the seat may be damaged but not obviously visible.
- Do not use lubricants on, modify or make any addition to your child seat, which could seriously affect its ability to protect your child.
- Do not use any aggressive cleaning products, which may harm the material of the child seat.
- The child seat needs to be checked regularly to ensure all the parts are functioning correctly and free from any damages.
- Never leave your child unattended in the child seat.
- Make sure luggage and other objects are properly secured. Unsecured luggage may cause severe injuries to children and adults in case of accidents.
- Child seats should not be bought or sold second-hand.

⚠ CAUTION

- Do not expose the child seat under intensive direct sunlight. A child seat too hot could harm the child.
- The rigid items and plastic parts of the child seat shall be so located and installed that they are not liable, during everyday use of the vehicle, to become trapped by a movable seat or in a door of the vehicle.
- The vehicle seats may show signs of wear and tear when using child seat. In order to avoid that, car seat protectors may be used.
- Do not use at home. It's not designed for home use and can only be used in a vehicle.
- Please mind your fingers when operating the child seat.

If in doubt, consult either the child seat manufacturer or the retailer.

4 INSTALLATION


VELIX 1 can be installed forward facing on vehicle seats by either of 2 ways, by ISOFIX or by the vehicle's 3-point safety belt. They fit different ranges of use.

Range	ISOFIX or belt	Top Tether	Securing
76-105 cm and ≥15 months and ≤21 kg	ISOFIX	Yes	5-Point Harness
100-150 cm	ISOFIX Safety Belt	No No	Safety Belt



⚠ DANGER Before each travel, check all ISOFIX Indicators and Top Tether Indicator (12) (if applicable) to make sure all connections are secure.

⚠ WARNING Make sure the child seat Backrest (9) rests against the vehicle seat backrest firmly, and that the vehicle seat headrest is not pushing the child seat away. You may adjust the vehicle seat headrest to the highest position.


⚠ WARNING Please ensure the vehicle seat that has the child seat installed is in upright position if the vehicle seat is reclinable.

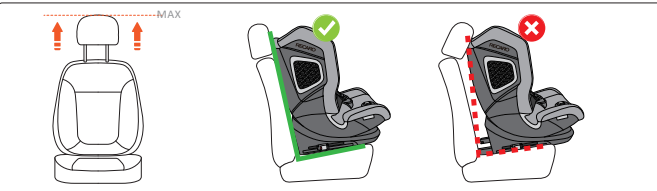


A. 76 CM - 105 CM, INSTALL WITH ISOFIX AND TOP TETHER

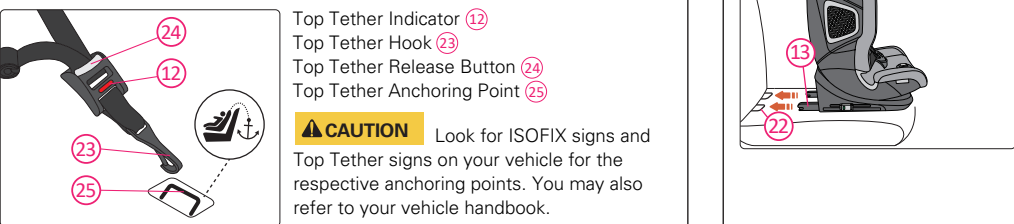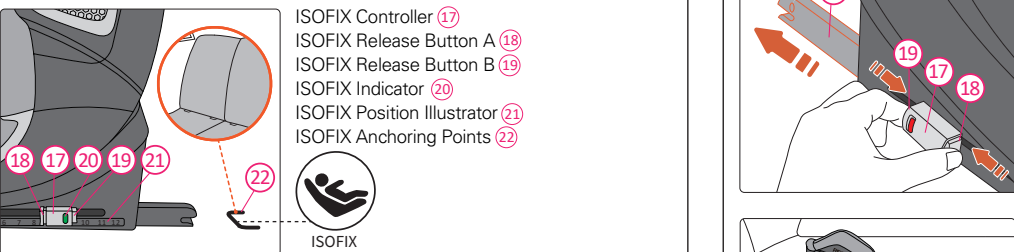


⚠ CAUTION ISOFIX Insertion Guides may be used to help make the installation easier in some vehicle models. They do not come with the product, but are offered free by RECARO dealers upon request. When you want to fold the vehicle seat after removing the child seat, remove the ISOFIX Insertion Guides as well.

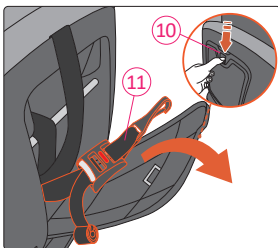

1. Press the button on User Manual Compartment (10) and open it. Take out Top Tether (11) and put it in front of Headrest. Then close the compartment.

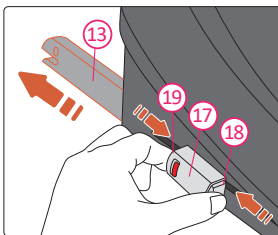


2. While pressing both ISOFIX Release Button A (18) and ISOFIX Release Button B (19), slide and push ISOFIX Controller (17) so the ISOFIX Connector (13) fully come out from the Base. Do this on both sides.

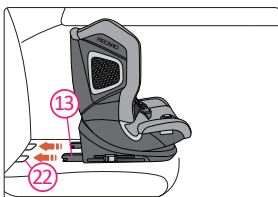


3. Put the child seat on the vehicle seat and aim both ISOFIX Connectors (13) to the ISOFIX Anchoring Points (22) in the vehicle seat.

⚠ WARNING On some vehicle models, ISOFIX Anchoring Points are hidden by plastic covers. Such plastic covers may need to be opened or removed first.

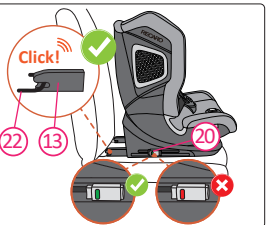

4. Push one ISOFIX Connector (13) to engage it with the ISOFIX Anchoring Point (22) with a click sound. Repeat the action on the other side to engage both ISOFIX Connectors.

⚠ DANGER Check both ISOFIX Indicators (20), and if they both show green the ISOFIX Connectors are locked successfully.

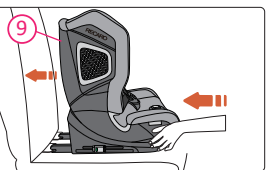


5. Push the child seat firmly towards the vehicle seat backrest as far back as possible, until the child seat Backrest (9) rests firmly against the vehicle seat.




6. Push the child seat with force while shaking it from side to side. This is to engage the ISOFIX Connectors to the ISOFIX Anchorage Points in the most firmly condition.

⚠ DANGER Please check that the child seat is connected securely by trying to shake and pull it out from both sides.

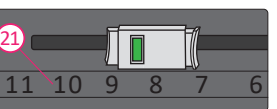


7. The extruding position of the ISOFIX Connector is shown by numbers on ISOFIX Position Illustrators (21) aligned with ISOFIX Indicator. ISOFIX Indicators on both left and right sides of the child seat must be aligning to the same numbers on ISOFIX Position Illustrators.

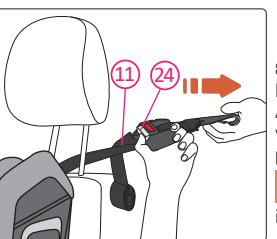


8. Lengthen Top Tether (11) to have enough length to latch it to the vehicle's Top Tether Anchoring Point. To lengthen Top Tether, while pressing Top Tether Release Button (24), pull the hook end of Top Tether.

⚠ WARNING Latch Top Tether and check its tensioning without a child in the seat.

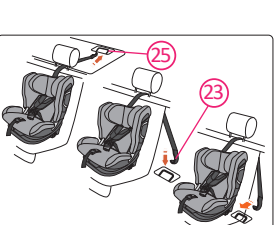

9. Engage Top Tether Hook (23) to the vehicle's Top Tether Anchoring Point (25).

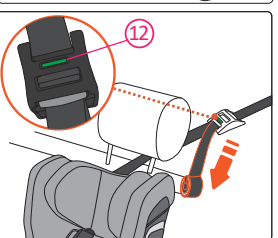

10. Pull the loose end of Top Tether hard to tension it tightly.


⚠ DANGER Only when Top Tether Indicator (12) consistently shows green is it properly tensioned. Check before each travel and after every time the child seat recline is adjusted.

⚠ DANGER Check that Top Tether is not twisted.


Now the child seat is installed for use by a 76- 105 cm child. Please proceed to adjusting the seat and securing your child.

B. 100 CM - 150 CM, INSTALL WITH ISOFIX ONLY

⚠ WARNING Before installing, make sure that 5-Point Harness and Top Tether are stored and hidden. The child seat recline shall also be at the most upright position. How to convert the child seat can be found in Chapter 10.

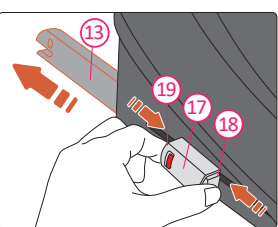


1. While pressing both ISOFIX Release Button A (18) and ISOFIX Release Button B (19), slide and push ISOFIX Controller (17) so the ISOFIX Connector (13) fully come out from the Base. Do this on both sides.

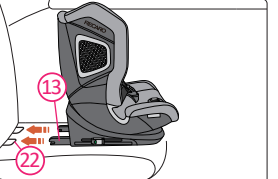

2. Put the child seat on the vehicle seat and aim both ISOFIX Connectors (13) to the ISOFIX Anchoring Points (22) in the vehicle seat.

⚠ WARNING On some vehicle models, ISOFIX Anchoring Points are hidden by plastic covers. Such plastic covers may need to be opened or removed first.

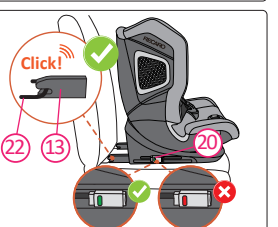

3. Push one ISOFIX Connector to engage it with the ISOFIX Anchoring Point (22) with a click sound. Repeat the action on the other side to engage both ISOFIX Connectors.

⚠ DANGER Check both ISOFIX Indicators (20), and if they both show green the ISOFIX Connectors are locked successfully.




4. Push the child seat firmly towards the vehicle seat backrest as far back as possible, until the child seat Backrest (9) rests firmly against the vehicle seat.



5. Push the child seat with force while shaking it from side to side. This is to engage the ISOFIX Connectors to the ISOFIX Anchorage Points in the most firmly condition.

⚠ DANGER Please check that the child seat is connected securely by trying to shake and pull it out from both sides.

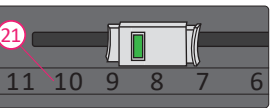


6. The extruding position of the ISOFIX Connector is shown by numbers on ISOFIX Position Illustrators (21) aligned with ISOFIX Indicator. ISOFIX Indicators on both left and right sides of the child seat must be aligning to the same numbers on ISOFIX Position Illustrators.

⚠ DANGER Do not recline the seat in this mode of installation, and only use it in the upright position. Now the child seat is installed for use by a 76- 105 cm child. Please proceed to adjusting the seat and securing your child.


C. 100 CM - 150 CM, INSTALL WITH SAFETY BELT

When installed with the vehicle 3-point safety belt, the child seat must always be connected to the vehicle, even when there is no child in it. So that in case of accidents, the child seat won't pose a threat to other passengers.

⚠ WARNING Before installing with safety belt, make sure that ISOFIX Connectors (13) are fully retracted and stored inside the Base, and 5-Point Harness and Top Tether are stored and hidden as well. The child seat recline shall also be at the most upright position. How to convert the child seat can be found in Chapter 10.

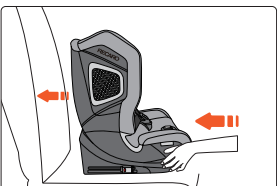

1. Put the child seat on the vehicle seat. Push the child seat toward vehicle seat backrest until it rests firmly against the vehicle seat.

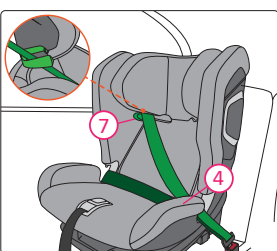

2. Route the safety belt into one of the Shoulder Belt Guide (7) and both of the Lap Belt Guides (4). Engage the safety belt buckle.


⚠ WARNING After your child leaves the child seat during everyday use, reengage the safety belt buckle to secures the child seat on the vehicle.

Now the child seat is installed for use by a 100- 150 cm child. Please proceed to adjusting the seat and securing your child.

5 ADVANCED SIDE PROTECTION ASP


⚠ DANGER To have optimum protection, always apply Advanced Side Protection ASP (15) on one side of the child seat that faces the vehicle door.

⚠ DANGER The child seat is tested and certified with or without Advanced Side Protection ASP. If it is installed on the middle seat of a vehicle, do not apply Advanced Side Protection ASP to make room for other passengers.

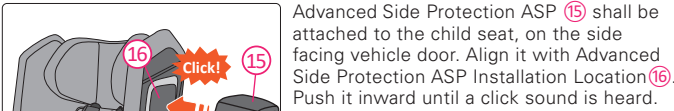

Advanced Side Protection ASP (15) shall be attached to the child seat, on the side facing vehicle door. Align it with Advanced Side Protection ASP Installation Location (16). Push it inward until a click sound is heard.

⚠ DANGER Check by pulling the Advanced Side Protection ASP to make sure it is engaged firmly.

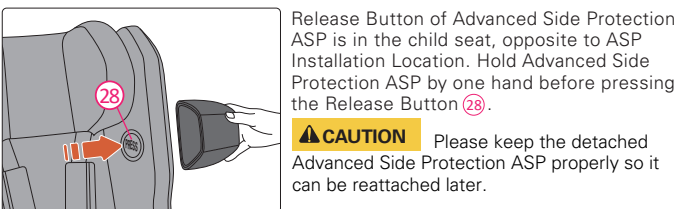

Release Button of Advanced Side Protection ASP is in the child seat, opposite to ASP Installation Location. Hold Advanced Side Protection ASP by one hand before pressing the Release Button (28).

⚠ CAUTION Please keep the detached Advanced Side Protection ASP properly so it can be reattached later.


6 ADJUSTING RECLINE

Range	Securing	Recline
76-105 cm and ≥15 months and ≤21 kg	5-Point Harness	3 positions
100-150 cm	Safety Belt	Upright only

VELIX 1 has 3 recline positions. When your child is between 76-105 cm in stature and secured by 5-Point Harness (2), all 3 recline positions can be used. When your child is over 100 cm in stature and secured by 3-point safety belt, please only use the upright position for utmost safety.




⚠ DANGER Check that the Shoulder Belt Section (34) runs over your child's collarbone, not across the neck.

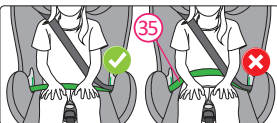

⚠ DANGER Check that the Lap Belt Section (35) runs as low as possible and runs on the bony part of the child's laps.



⚠ DANGER Check that both the Shoulder Belt Section (34) and the Lap Belt Section (35) run firmly in the Lap Belt Guide (4).

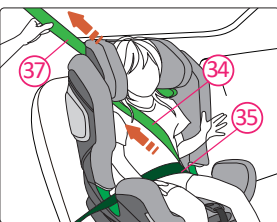


5. Remove all slack of the safety belt so your child is secured firmly. First tension the Lap Belt Section (35) by pulling Shoulder Belt Section (34) across your child's chest. Then pull the Shoulder Belt Section above Shoulder Belt Guide (37) to fully tension the safety belt.

⚠ CAUTION To release the child, release safety belt buckle and route the safety belt out from the Lap Belt Guide. If the child seat is installed with safety belt, reengage the buckle to secure the child seat after the child leaves.

⚠ DANGER Check before each travel:

1. The Lap Belt Section is firmly in the Lap Belt Guides on both sides of the Base.
2. Shoulder Belt Section runs firmly in the Lap Belt Guide on one side and in the Shoulder Belt Guide on the other side.
3. The whole 3-point safety belt is tight and not twisted. The safety belt buckle must not be caught in the Lap Belt Guide.

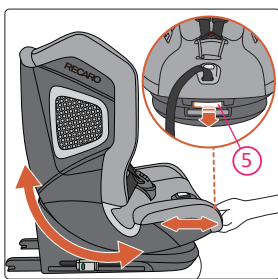

Pull Recline Adjustment Handle (5), and slide the child seat by pushing and pulling it back and forth against the Base. Length of Top Tether (11) may interfere with recline adjustment. When the child seat is installed with Top Tether, loosen Top Tether before adjusting the recline. Tighten Top Tether after adjustment.

⚠ DANGER When installed with Top Tether, always check the tensioning of Top Tether after adjusting the recline. Top Tether Indicator must show green.

7 ADJUSTING HEADREST


Range	Securing	Headrest
76-105 cm and ≥15 months and ≤21 kg	5-Point Harness	Lower 7 positions
100-150 cm	Safety Belt	Upper 11 positions

VELIX 1 has 17 Headrest (1) positions. When your child is between 76-105 cm in stature and secured by 5-Point Harness (2), the lower 7 positions are available. When your child is over 100 cm in stature and secured by 3-point safety belt, the upper 11 positions are available.


⚠ DANGER 5-Point Harness shall be used when your child is less than 100 cm in stature, and we recommend to use it till 105 cm. Vehicle 3-point safety belt shall be used when your child exceeds 105 cm in stature.

⚠ WARNING As the child grows, the Headrest shall be adjusted from time to time.

⚠ CAUTION Loosening 5-Point Harness may be needed before adjusting Headrest. Length of the harness can hamper adjustment, even when the child is secured by 3-point safety belt because the harness is only hidden but not removed. When hiding the harness, adjust it to the longest position first.

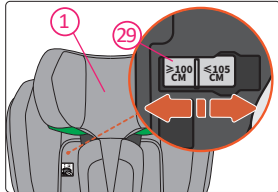


Velix 1 has a Height Controller (29) to limit potential misuse, which must be adjusted when you convert the child seat from up to 105 cm range 5-Point Harness mode to above 100 cm range safety belt mode. Adjust Headrest (1) to the highest available position. After sliding the Height Controller, the higher positions will then be available while the lower positions will be blocked.

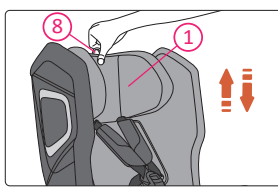


Pull and hold Headrest Adjustment Ring (8) to release the Headrest (1). Move the Headrest to the correct height. Release the ring to lock the Headrest.

A. CORRECT HEIGHT WITH 5-POINT HARNESS

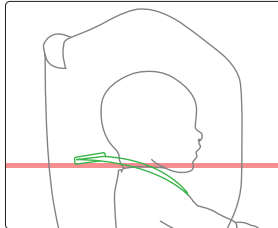

The Headrest shall be adjusted to a level that the ends of 5-Point Harness shoulder straps are just above the child's shoulders.

B. CORRECT HEIGHT WITH 3-POINT SAFETY BELT

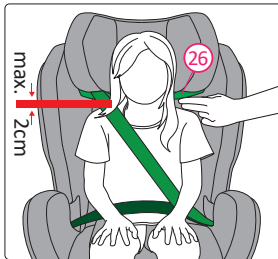


The Headrest shall be adjusted to a level that the Shoulder Belt Guides (26) are just above the child's shoulders and the gap, measured vertically, must not be greater than 2 cm (about 2 fingers wide).

8 HARNESS AND SAFETY BELT

VELIX 1 has 2 modes of use. 5-Point Harness (2) shall be used when your child is not over 105 cm in stature and not over 21 kg in weight. When your child is above either limit, always use the vehicle's 3-point safety belt.

A. 76 CM - 105 CM, SECURING YOUR CHILD WITH 5-POINT HARNESS


Range	Securing
76-105 cm and ≥15 months and ≤21 kg	5-Point Harness

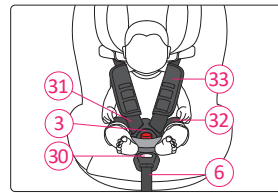

The 5-Point Harness system

5-Point Harness Buckle (3)
5-Point Harness Adjuster (6)
Harness Adjustment Button (30)
Shoulder Harness (31)
Lap Harness (32)
Chest Pads (33)

1. Hold down the Harness Adjustment Button (30) and pull Shoulder Harness (31) towards you as much as possible. Make sure to pull Shoulder Harness below Chest Pads (33).

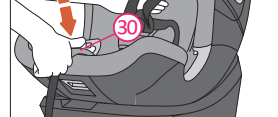


2. Press the red button on 5-Point Harness Buckle (3) to unfasten it.



3. Seat your child in the child seat. Route the Shoulder Harness (31) directly over your child's shoulders and engage the buckle tongues together. Click the engaged tongues into the buckle body. A clear "click" shall be heard.




4. Adjust Headrest (1) to the highest possible position. Adjust Height Controller (29) beneath cover of Headrest.

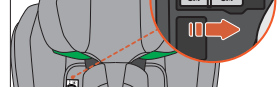

5. Unfasten the press buttons on Chest Pads (33). Move Chest Pads away from the harness belts. Do not detach the velcro and keep the Chest Pads on their own link belt. Only detach the velcro when you want to take away Chest Pads for washing.



6. Turn around the right hand Chest Pad, then fix it to the left hand one by press buttons.

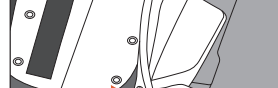


7. Hide the connected Chest Pads beneath Headrest cover (38).

⚠ WARNING After hiding the Chest Pads, check that the Headrest cover is not deformed.




8. Insert buckle tongues of the 5-Point Harness Buckle into prearranged storage locations on left and right hand sides respectively. Please do this as shown in the picture on the left. Hide the belts of 5-Point Harness beneath cover.

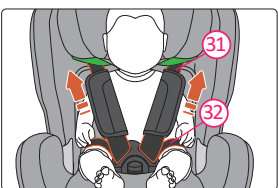

4. Make sure your child is seated securely with back resting on the Backrest. Pull both Shoulder Harness (31) to tighten the Lap Harness (32).

⚠ DANGER Please check that the Lap Harness is worn low down so that the child's pelvis is firmly engaged.

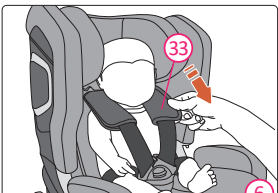

5. Pull 5-Point Harness Adjuster (6) until the Harness firmly secures your child. It is recommended to repeat that process for best tight fit of the 5-Point Harness. Finally pull both Chest Pads (33) down fully.


⚠ DANGER Please check after tightening that none of the harness straps are twisted, and definitely no slack remains.

⚠ WARNING When your child is on a longer journey, it is recommended to check and tighten the 5-Point Harness during the journey.

⚠ CAUTION When you want to release your child, follow steps 1 and 2.


B. 100 CM - 150 CM, SECURING YOUR CHILD WITH SAFETY BELT

Range	Securing
100-150 cm	Safety Belt

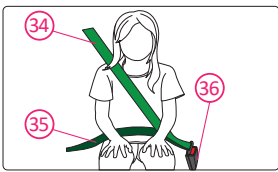


The 3-point safety belt system

Shoulder Belt Section (34)
Lap Belt Section (35)
Safety Belt Buckle (36)

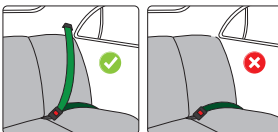


⚠ DANGER Never secure your child or the child seat with a 2-point belt as that may cause serious injuries or death in the event of an accident.

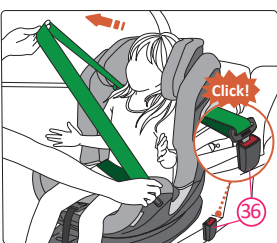


1. Take the released safety belt. Seat your child in the child seat and route the safety belt in front of his/her chest. Lock the belt into Safety Belt Buckle (36) with a click.

⚠ DANGER Make sure the 3-Point Belt is not twisted. It shall be adjusted to tightly hold the child's body.

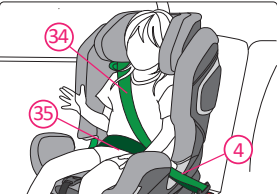


2. Place the Shoulder Belt Section (34) and the Lap Belt Section (35) on the side of the buckle into the Lap Belt Guide (4) of the Base.


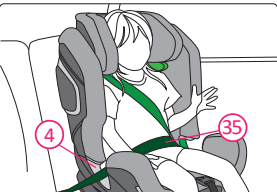


3. Place the Lap Belt Section (35) on the other side of the Base into the Lap Belt Guide (4).

⚠ DANGER The Lap Belt Section must lie as low as possible over the child's pelvis on both sides to provide the best protection.

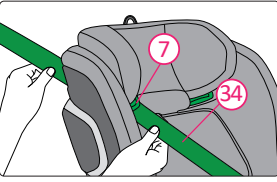


4. Check that the Shoulder Belt Section (34) is routed in the green Shoulder Belt Guide (7), and it lies completely in Shoulder Belt Guide.

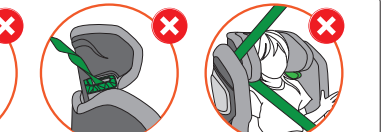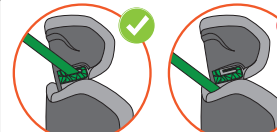

9 REMOVAL


A. REMOVE WITH ISOFIX

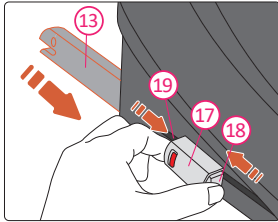

1. While pressing and holding both ISOFIX Release Button A (18) and ISOFIX Release Button B (19), slide the ISOFIX Controller (17) to move ISOFIX Connector (13) completely back into the child seat Base. This shall be done on both sides of the child seat.




2. Detach Top Tether Hook (23).

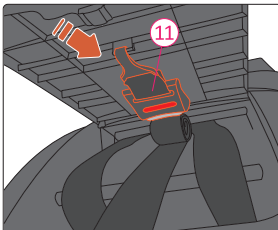

3. Open User Manual Compartment. Round up Top Tether (11) and position it neatly in the compartment, hooked on the bar in the compartment. Refer to the picture on the left.

B. REMOVE WITH SAFETY BELT

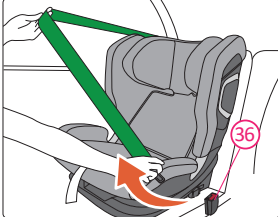


Release the safety belt buckle (36). Route the safety belt out from all the belt guides.


10 CONVERTING FROM 5-POINT-HARNESS TO SAFETY BELT

Range	ISOFIX or belt	Top Tether	Securing
76-105 cm and ≥15 months and ≤21 kg	ISOFIX	Yes	5-Point Harness
100-150 cm	ISOFIX	No	Safety Belt
	Safety belt	No	


Pay attention to the growth of your child when he/she is about 100-105 cm in stature. Convert the child seat's securing mode from using 5-Point Harness (2) to using vehicle 3-point safety belt when your child exceeds 105 cm in stature at the latest. Remove the child seat from the vehicle, to store and hide 5-Point Harness and Top Tether (11) to avoid misuse. After conversion, the child seat can be installed by either ISOFIX without Top Tether, or by vehicle 3-point safety belt.

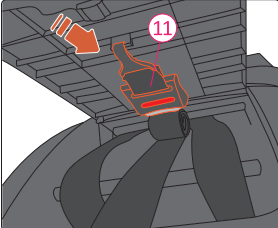


1. Remove the child seat from your vehicle. Open User Manual Compartment. Round up Top Tether (11) and position it neatly in the compartment, hooked on the bar in the compartment. Refer to the picture on the left.

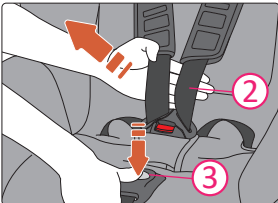

2. Adjust 5-Point Harness (2) to the longest position. Release the 5-Point Harness Buckle (3).

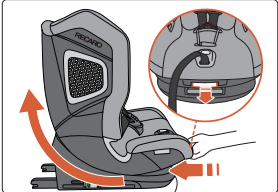


3. Adjust recline to the upright position.

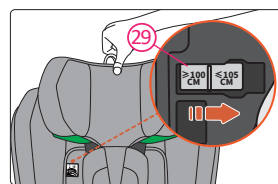

5. Unfasten the press buttons on Chest Pads (33). Move Chest Pads away from the harness belts. Do not detach the velcro and keep the Chest Pads on their own link belt. Only detach the velcro when you want to take away Chest Pads for washing.



6. Turn around the right hand Chest Pad, then fix it to the left hand one by press buttons.

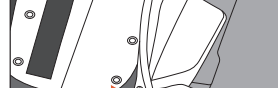


7. Hide the connected Chest Pads beneath Headrest cover (38).


⚠ WARNING After hiding the Chest Pads, check that the Headrest cover is not deformed.



8. Insert buckle tongues of the 5-Point Harness Buckle into prearranged storage locations on left and right hand sides respectively. Please do this as shown in the picture on the left. Hide the belts of 5-Point Harness beneath cover.

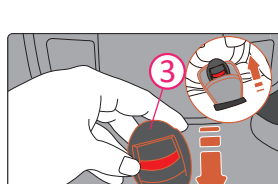

9. Take Crotch Pad away from the buckle body of 5-Point Harness Buckle (3). Push the buckle body through the slots of child seat cover and the cushioning foam.

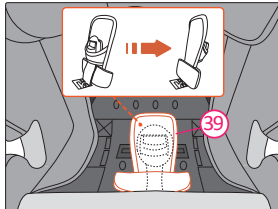

10. Put the buckle body and Crotch Pad (39) together again, but in the reverse direction as shown in the picture. Store them in this compartment, beneath cover.




11. Restore the child seat's cover. Reinstall the child seat to the vehicle by either ISOFIX without Top Tether, or by vehicle 3-point safety belt.

11 CARE AND MAINTENANCE




Cover of the child seat can be removed for washing. Please do so with mild detergents. Delicates washing programme shall be used if using a washing machine and ≤30°C temperature. Please refer to the washing label of the cover. Plastic parts can be cleaned with a mild soap and water.

⚠ DANGER The child seat must not be used without the cover. The cover is a safety feature and may only be replaced by an original RECARO cover.

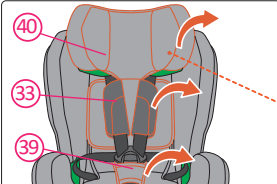

1. Remove the headrest cover (40). Unbuckle the 5-Point Harness. Remove the Chest Pads (33) and the Crotch Pad (39).

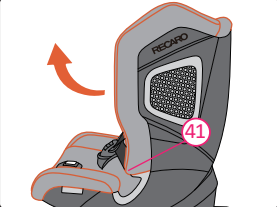

2. Release the Cover Hooks (41) on both sides. Then remove the child seat main cover.

12 WARRANTY

1. The warranty for RECARO VELIX 1 lasts for 2 years from the date of original purchase from new. The warranty is valid in the country where this product was sold by a qualified RECARO retailer. Please keep your proof of purchase in case of a warranty claim.

2. The usage of the product shall be in accordance with this user manual. Any damage caused by operations against the instructions in this user manual will void the warranty.

3. Never use unqualified third parties for maintenance, repair or modification. Check with RECARO or our qualified retailers for advice. If you have any further questions regarding the child seat's use, please feel free to contact us: AVOVA GmbH, Blaubeurer Straße 71, 89077 Ulm, Germany, T: +49 731 379941-0, info@recaro-cs.com, www.recaro-childrensafety.com

13 DISPOSAL

Refer to your local waste disposal regulations. The product is composed of multiple recyclable materials, and it contains no hazardous waste.

